 





Coca-Cola freestyle Helpful Tips

For Coca-Cola Service, Phone-Fix® and Small Parts, call
1-800-241-2653(COKE), 24/7/365.




1. Daily Cleaning

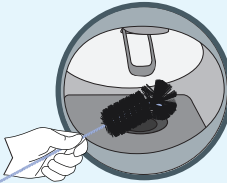
<p>Touch Screen</p>  <p>Using a clean soft cloth and approved sanitizing solution, wipe down touch screen and all exterior surfaces throughout the day.</p>	<p>Nozzle</p>  <p>Locate and remove nozzle.</p> <p>Use a clean nozzle brush (Coke part# 954412) and approved sanitizing solution (Kay-5, Coke part #24041) to scrub nozzle.</p> <p>Using the same brush and sanitizing solution, scrub nozzle ring area.</p>	<p>Drain</p>  <p>Check for and remove debris from drain pan. Use drain cleaning brush (Coke part# 139176) weekly to keep drain line clear.</p>
---	---	--

2. Check Sweeteners

High-Fructose Corn Sweetener (HFCS)




When disconnecting bag-in-box, place clean cloth under connector to catch any sweetener drips. Rinse connector in a cup of warm water prior to connecting a new bag-in-box.



When reconnecting, ensure connection is secure and screwed on completely.


Remember to check HFCS and NNS levels 1 to 2 times per day.

Non-Nutritive Sweetener (NNS)

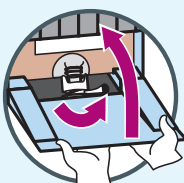

Position NNS bag-in-box with arrows pointing down and white lever secure (lever moves left to right to close; right to left to open).

Coca-Cola Freestyle 7000 dispenser only

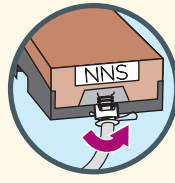


The NNS bag-in-box sits in a tray, typically located under the counter. Follow the same connection and cleaning procedures as shown on left.

NNS will transition from a SmartPAK™ cartridge to bag-in-box. For NNS cartridge replacement instruction, refer to 7000 section below.

3. Cartridge Replacement

SmartPAK® cartridge (paperboard)

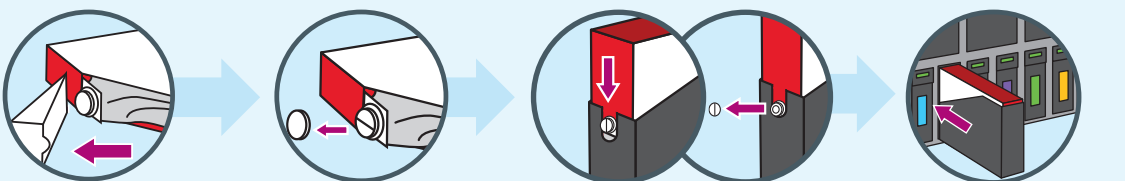

Open SmartPAK paperboard box by removing perforated corner.

Pull off white dust cap.


Insert paperboard cartridge into black plastic tray and remove inner seal.

Insert cartridge and plastic tray into appropriate slot.*

* Some brands (dark colored colas) require 60-seconds of agitation by the dispenser with the lower door closed prior to starting the "Prime-All" procedure.

For product quality, check "Enjoy By" date on all cartridges.

Coca-Cola Freestyle 7000 dispenser only



Open SmartPAK paperboard box in the same manner as described above for the Coca-Cola Freestyle 8000 and 9000 dispensers.

Vigorously shake each cartridge for 10 seconds (leave inner seal on the cartridge while shaking).

Insert paperboard cartridge into black plastic tray, remove inner seal; align cartridge with the tray.

Insert cartridge and plastic tray into appropriate slot.

Black plastic cartridge trays should be "hand washed" only, using Kay-5 sanitizer, or an approved equivalent, and **never placed in a dishwasher**. Placing trays in dishwasher may warp them over time.